 


How to Use the Media Server Feature

The Media Server feature allows you to share music, videos and photos from a USB or Mobile hard disk drive that's connected to the router, to game consoles or media players in the same network.

HOW TO SET UP:

Plug the USB storage into the USB port of the TP-LINK router and wait until the USB LED is solid green.

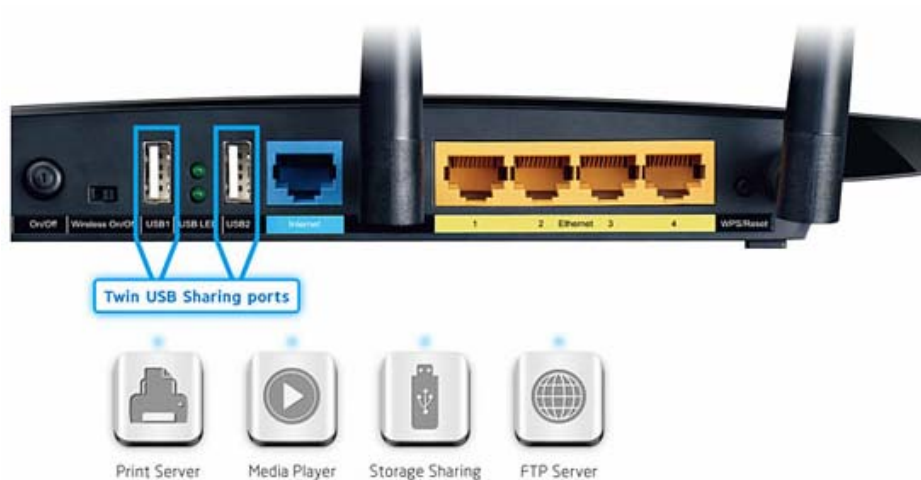 


You can setup the media server by the following steps:

Step 1 Open a web browser (IE/Chrome/Firefox/Safari), type **tplinklogin.net** in the address bar, and then press Enter button.

Step 2 Type the username and password in the login page, and then click OK to log into the router. *The default username and password are both **admin** (in lower case.)*

Step 3 Click **USB Settings** -> **Media Server** on the left side menu.

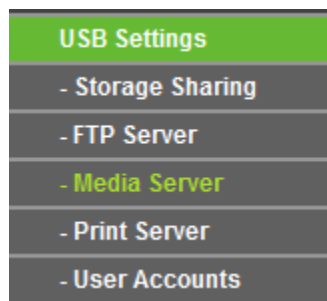

Step 3 Click **Start** button. *The USB storage device must be recognized before configuring the Media Server.*

Media Server Setting

Server Name: TP-LINK_BE4944
 Server Status: Stopped

Auto-scan every 2 hours

Name	File System	Folder	Delete
------	-------------	--------	--------

Step 4 Click **Add share folder** button. Choose the folders you want to share and click **Save**.

Auto-scan every 2 hours

Name	File System
------	-------------

Add New Folder

Display Name:
 Partition: Share entire partition
 Folder Location: /

Select	Folder
<input type="checkbox"/>	upper
<input checked="" type="radio"/>	Music
<input type="radio"/>	Photo
<input type="radio"/>	Video





Current No. 1 page


Step 5 Your shared folders will be listed on the Media Server page.

Auto-scan every 2 hours

Name	File System	Folder	Delete
folder1	NTFS	/Music	Delete

Access the Media Server on PS3

Select  (Search for Media Servers) under  (Photo),  (Music) or  (Video).
 The TP-LINK Media Servers that can be connected will be displayed.

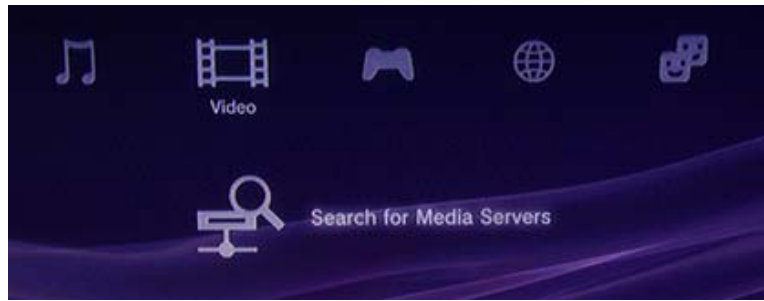


Access the Media Server on XBOX360

The TP-LINK Media Servers that can be connected will be displayed in Video/Music/Picture Library.



 Access the Media Server on Windows Media Player

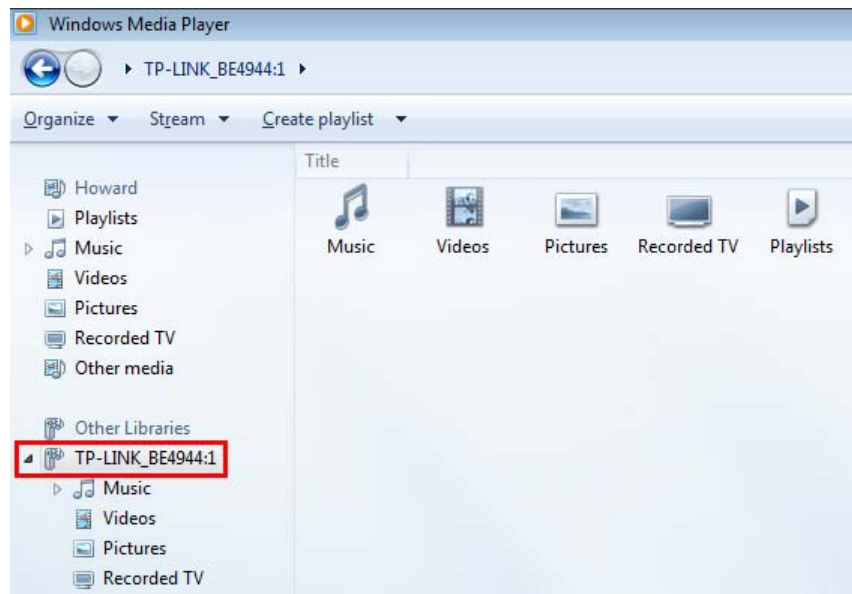

Note:

Some USB storage devices may require using the bundled external power.